

# Bamboo X Banner Display

BSD892  
210077, 210080, 190305

## Product Specifications


Viewable Graphic Size: 24" w x 63" h  
Graphic Finishing: # 2 Grommets in all four corners  
Footprint Dimensions: 25" w x 16" d  
Graphic Template Available

Scan to view Product Instructional Video or visit:  
[www.creativedisplaysite.com/BambooX.html](http://www.creativedisplaysite.com/BambooX.html)



## Product Parts

- 1 - Bottom Legs w/ Plastic Fixture
- 2 - Top Legs (x2)

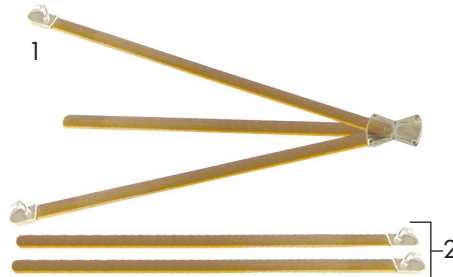

## Display Set-Up



### Step 1

Take all parts out of the bag and place on clean surface. Spread the Bottom Legs (1) and lay the assembled unit face up.



### Step 2

Slip each Top Leg (2) into the holes on the top of the Plastic Fixture (1), being sure that the hooks face the same direction as those on the Bottom Legs (2).

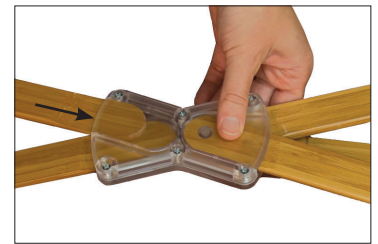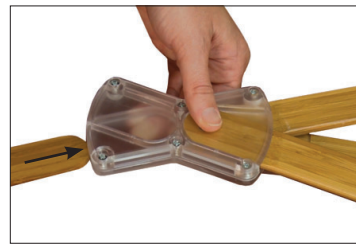


### Step 3

Lay the banner flat, printed side up, on top of the banner stand. Slip the grommets onto the hooks on each corner. The Stand will need to bend, which will pull the banner taut.



### Step 4

Stand the unit upright and gently pull the back leg back if needed for stability.

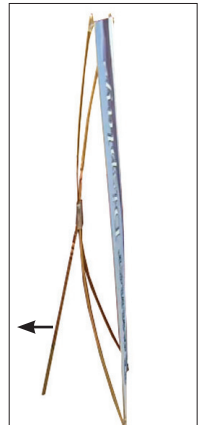

## Storage

Place hardware inside middle of rolled up banner, inside soft case. Store in a cool, dry place .



## Care

To clean, wipe with a soft, damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.