


Warning: To avoid damage, ALL hooks must be disconnected before collapsing the frame.

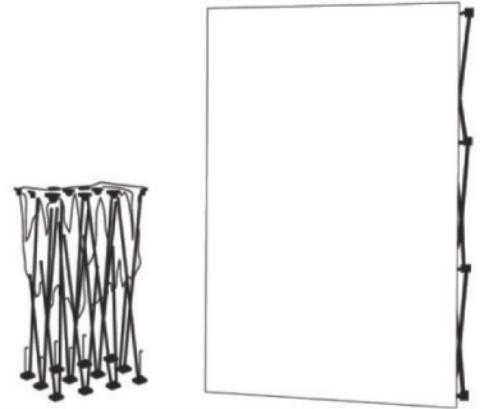


How to set up your OneFabric™:




1. Remove frame and graphic from nylon bag.




2. Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.

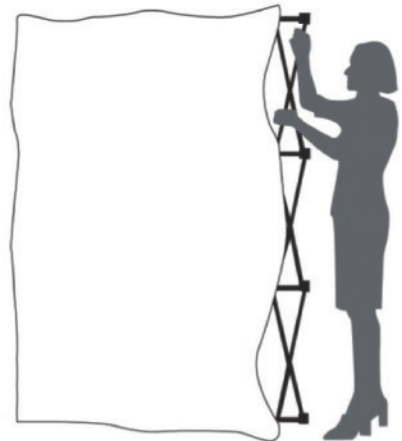

3. Lock all hooks between front and back hubs.

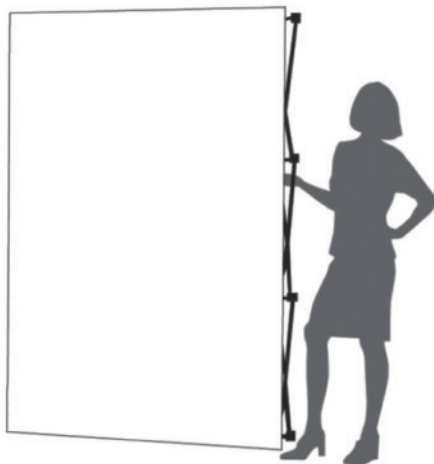

4. Adjust leveling feet for desired angle. OneFabric display can now easily be moved into position.


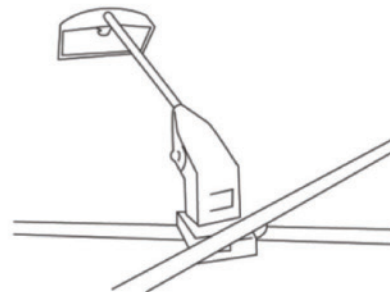


5. OPTIONAL


Attach lights to top of frame by sliding the plastic "x blocks" under the frames cross sections.

Warning: To avoid damage. ALL hooks must be disconnected before collapsing the frame.

How to attach or replace graphics in your OneFabric™:

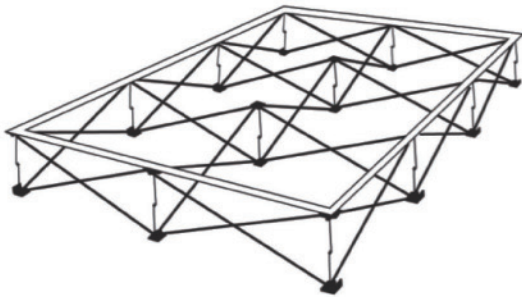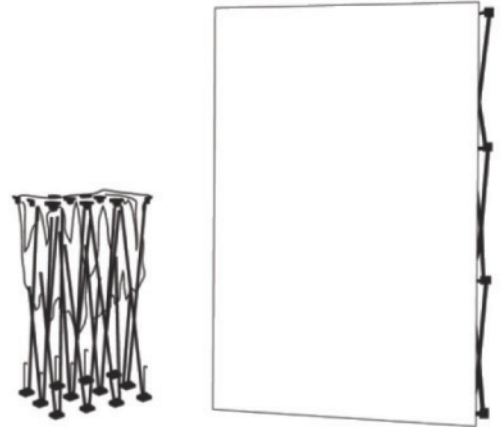


1. Assemble frame and lay flat on its back. Remove existing graphic.

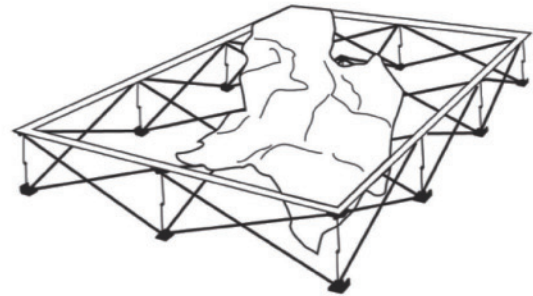

2. Starting at one corner, attach velcro on the graphic to velcro on the frame.

NOTE: Velcro on the graphic should extend approx. 1/4" beyond velcro on the frame (it should not be flush).

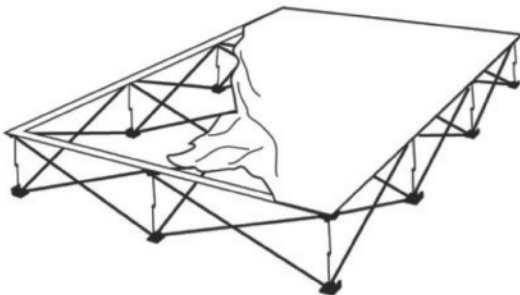

3. Working in a continuous direction around the frame, attach the rest of the graphic.



4. If needed, adjust velcro for tight fit.